


Mack MP7

Supply Port: Located on left side of engine between ECM and crankcase ventilation filter. Remove allen plug with an 8mm allen socket and install hose and adapter together. It makes access easier if you pull the fuel line up and rest the corner on top of the metal line.

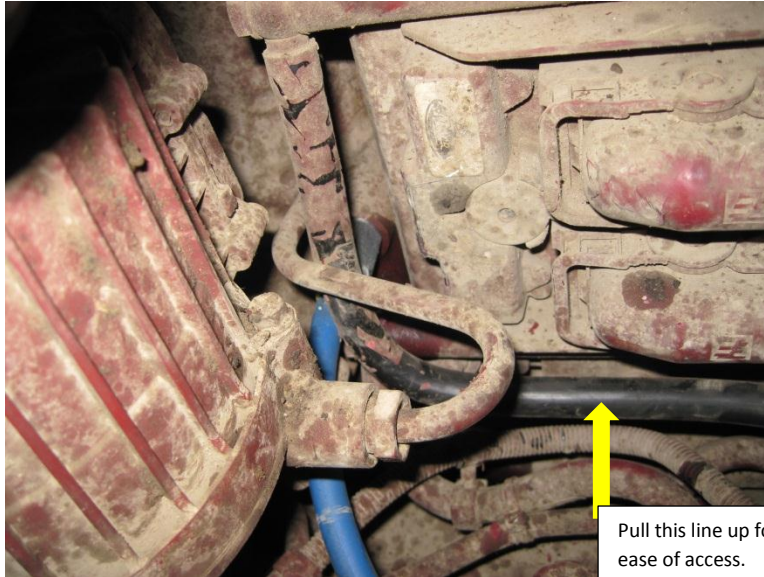


Pull this line up for ease of access.

Return Tee installed by splicing into the engine oil fill tube on the left side of the engine.

CAUTION: The Oil Filler Neck at the engine is plastic and can easily be broken. DO NOT remove the hose from this fitting.

Cut the hose and insert the steel "T" fitting using the hose clamps supplied with the installation kit.

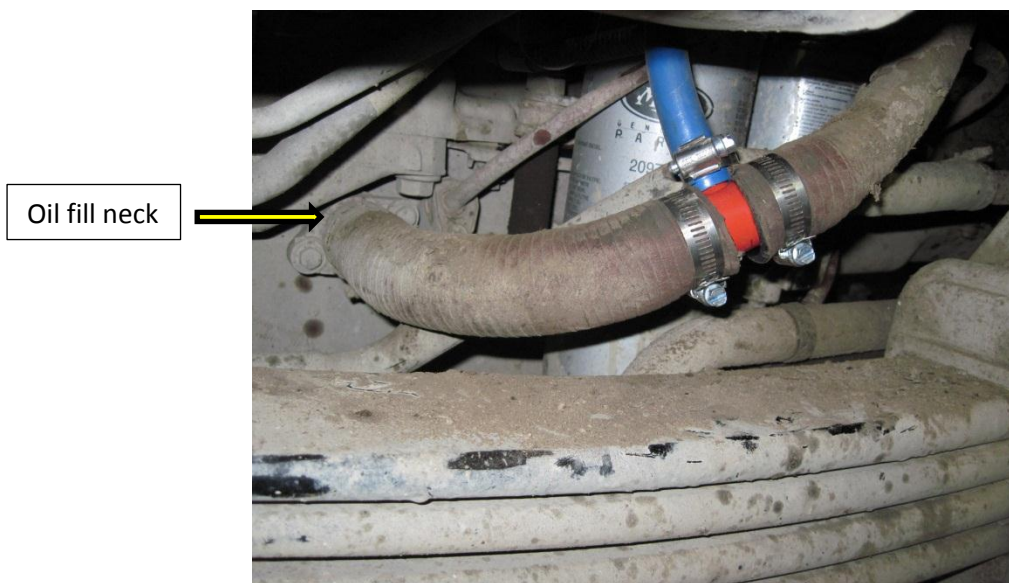

Oil fill neck