



## Mack MRU613 Eco-Pur Mounting

This mounting location can be used on Mack MRU613 model trucks up to 2011 year models.


The mounting location is located behind the cab on the driver side of the vehicle. The power steering reservoir will be used to mount additional brackets. The lower bolt (indicated by the yellow arrow) will need to be removed.

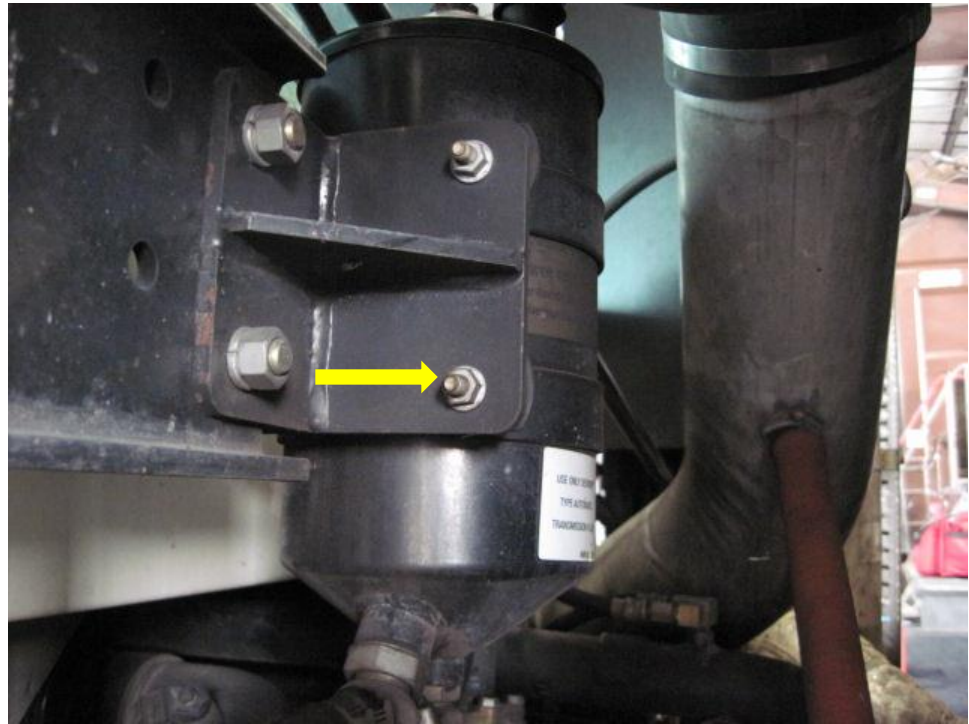

An M-181-A bracket is shown here mounted to the back side of the Eco-Pur mounting bracket. Proper orientation of the M-181-A is important to permit filter clearance once mounted. Only 2 bolts will be used to secure the brackets together.

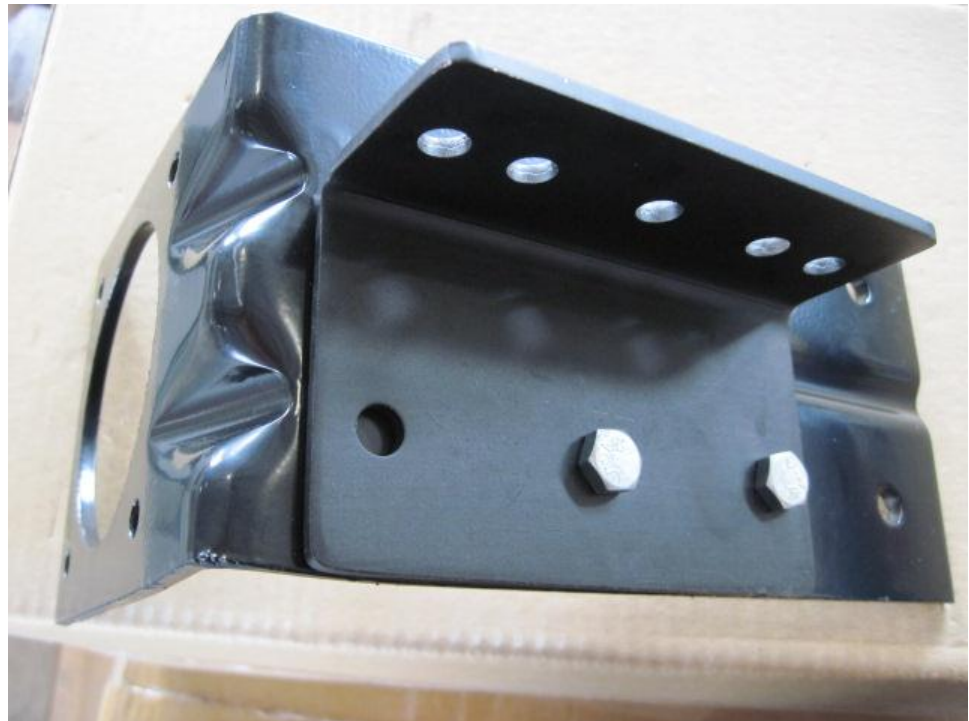

Once the Eco-Pur brackets are secured using the bolt that was removed, drill an additional hole through the existing hole in the M-181-A bracket making sure the Eco-Pur bracket is level. Secure it with one of the 5/16" bolts supplied with the installation kit.

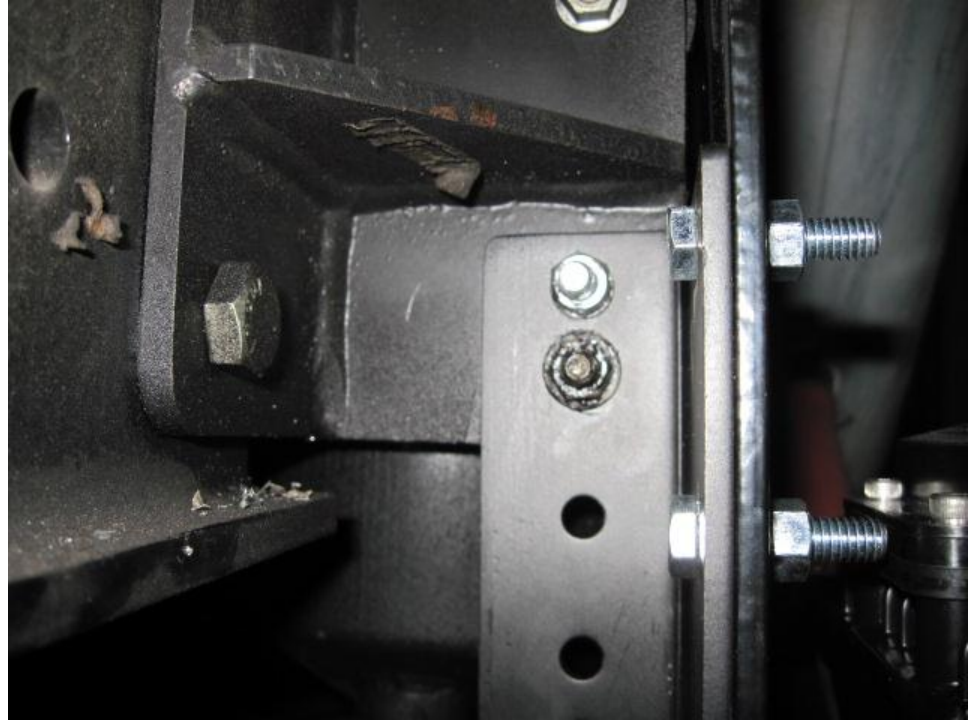

This picture shows the Eco-Pur unit mounted and hoses attached. There should be plenty of clearance above and below the unit and filter using this mounting configuration.

