


Peterbilt 367 Eco-Pur Mounting

The mounting location shown is in a Peterbilt 367.

Select this mounting location on the right side frame rail. Note the existing hole in the frame rail where the A/C line hold down clamp was removed. Use a screw driver and slightly bend the line away from the frame rail to make room for the Eco-Pur bracket to fit between the line and the frame.



Drill 2 holes in the frame rail using the bracket as a template. You will then reattach the A/C line hold down clamp using one of the mounting bolts, as shown in the next picture.

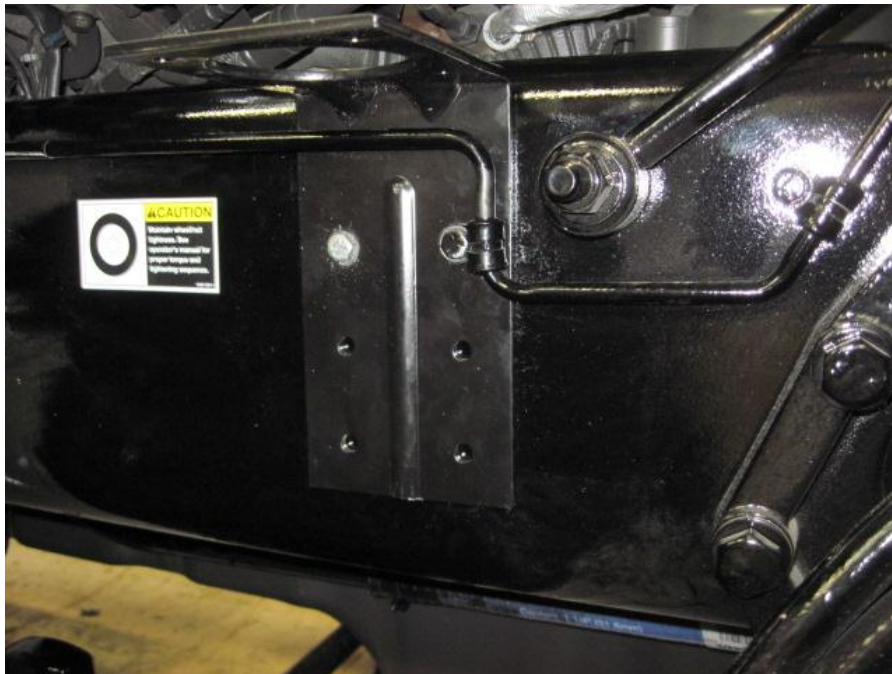

This shows the Eco-Pur mounted to the bracket and hoses attached.

